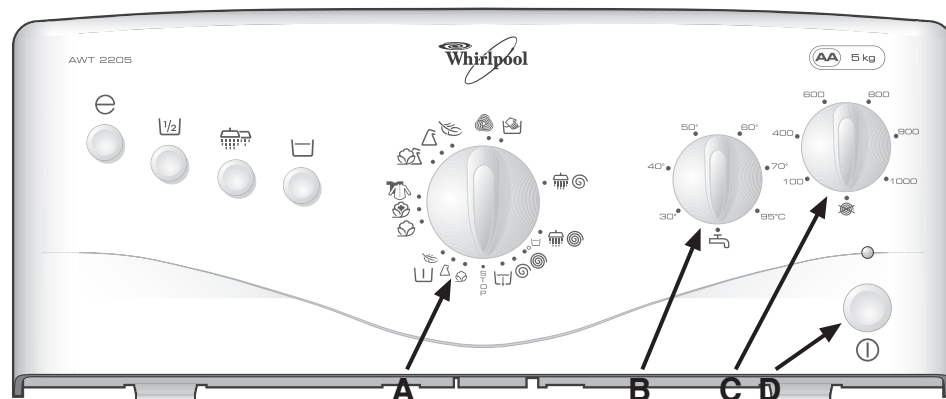 


GB AWT 2205



- A. Programme Selection Knob
- B. Temperature Selection Knob
- C. "Spin Speed Selection" Knob
- D. "On/Off" Button ①

☞ "Cold"

- * : option / Yes: dosing required
- ¹⁾ Do not use liquid detergents.
- ²⁾ For improved garment care, spin speed is restricted to 900 rpm in this programme.
- ³⁾ For improved garment care, spin speed is null in this programme.

Programme	Care Labels	Type of wash / Notes	Max. Load kg	Detergents and Additives				Special options				Temperature °C	Max. Spin Speed rpm
				Pre-wash I	Main wash II	Softener 🌸	Bleach ⚠️	Eco wash e	Half Load 1/2	Intensive Rinse 🚿	Rinse Hold 🛑		
Cotton with prewash	🛑 🌸	📏 95 📏 60	Heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen.	5,0	Yes ¹⁾	Yes	*	*	*	*	*	Max. 95	1000
Synthetic with prewash	🛑 ⚠️	📏 60 📏 40	Heavily soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	2,0	Yes ¹⁾	Yes	*	–	*	*	*	Max. 60	900 ²⁾
Delicate with prewash	🛑 🌸	📏 40 📏 30	Heavily soiled curtains and delicate clothing, dresses, skirts, shirts and blouses.	1,5	Yes ¹⁾	Yes	*	–	–	–	*	Max. 40	900 ²⁾
Cotton	🌸	📏 95 📏 60 📏 40 📏 30	Normally to heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen.	5,0	–	Yes	*	*	*	*	*	Max. 95	1000
Coloured cotton	🌸 ⚠️	📏 60 📏 30	Normally soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen.	3,0	–	Yes	*	–	*	*	*	Max. 60	1000
Daily Mixed	👕	📏 60 📏 30	Slightly to normally soiled textiles made of cotton and/or synthetic.	3,0	–	Yes	*	–	–	*	*	Max. 60	1000
Mixed Cotton / Synthetic	👕 ⚠️	📏 60 📏 40	Normally to heavily soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	2,0	–	Yes	*	–	*	*	*	Max. 60	900 ²⁾
Synthetic	⚠️	📏 30	Normally soiled overalls and sportswear made of cotton, polyester, polyamide and blends with cotton.	1,5	–	Yes	*	–	*	*	*	Max. 60	900 ²⁾
Delicate	🌸	📏 40 📏 30	Curtains and delicate clothing, dresses, skirts, shirts and blouses.	1,5	–	Yes	*	–	–	–	*	Max. 40	900 ²⁾
Wool	🌀	🌀	Only woollens with a felt-free finish, labelled with the woolmark and identified as machine washable. If you select "Rinse Hold" do not leave items to soak for too long.	1,0	–	Yes	*	–	–	–	*	Max. 40	900 ²⁾
Handwash	👕	👕	Textiles made of silk, linen, wool and viscose marked as "handwashable". If you select "Rinse Hold" do not leave items to soak for too long. No spinning.	1,0	–	Yes	*	–	–	–	*	Max. 30	– ³⁾
Rinse + Gentle Spin	🚿 🌀	–	Programme for treating delicate laundry with starch or softener.	2,0	–	–	*	–	*	*	*	–	900 ²⁾
Rinse + Spin	🚿 🌀	–	Programme for treating cotton or linen laundry with starch or softener.	5,0	–	–	*	–	*	*	*	–	1000
Spin	🌀	–	Programme to spin cotton or linen laundry intensively with maximum spin speed.	5,0	–	–	–	–	–	–	–	–	1000
Gentle Spin	🌀	–	Programme to spin delicate laundry gently with a restricted spin speed.	2,0	–	–	–	–	–	–	–	–	900 ²⁾
Drain	🚰	–	Drain only - no spinning. Alternative method of terminating programme after "Rinse Hold".	–	–	–	–	–	–	–	–	–	–

N.B. This machine is controlled by sensors. Please avoid excessive detergent dosing.

Whirlpool is a registered trademark of Whirlpool USA.

5019 312 10356

CONSUMPTION DATA




Programme	Temperature Selector (°C)	Load (kg)	Water (l)	Energy (kWh)	Approx. Programme Duration (hours : minutes)
Cotton	95	5,0	67*	1,80	2:05
Cotton	60	5,0	59	0,95	2:05
Cotton	40	5,0	59	0,55	2:05
Daily Mixed	40	3,0	49	0,48	1:00
Synthetic	60	2,0	56	0,80	1:30
Synthetic	40	2,0	56	0,40	1:30
Delicate	40	1,5	60	0,55	0:45
Wool	40	1,0	60	0,50	0:40
Handwash	30	1,0	60	0,30	0:50

Prewash cycle increases programme duration approximately 15 min. Consumption values were measured in normalized conditions in compliance with standard IEC/EN 60 456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash.

The data on the “Energy Label” refer to programme “Cotton 60°C”.

* To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

PREPARATION OF WASH CYCLE

- Load the machine, close the drum doors and check that they are properly locked.
- Add detergents and additives into the dispenser to no more than the “MAX” level mark, as follows:
 - Programme with pre and main wash | ||
 - Main wash programme without prewash ||
 - Fabric softeners and conditioners 
 - Chlorine bleach 
 - Stain remover agents ||
 - Anti-scale agents (if necessary) ||
- Turn the **programme selector knob** to the desired programme.
- Turn the **temperature selector knob** to the desired temperature.
- Turn the **spin speed selector knob** to the desired spin speed. If the spin speed “ ” is selected, the final spin is cancelled, but not the intermediate spins. The programme ends with a drain cycle.

SELECT THE DESIRED OPTION

Selecting or deselecting an option can be done at any time during the programme. The option will be applied as long as the corresponding programme phase has not been executed yet.

“Eco wash” button

- The duration of the wash is extended and the temperature reduced to save energy maintaining good washing results.

 


“Half Load” button

- Can be used for small loads and lightly soiled laundry.
- Reduces the water consumption especially during the rinse.

“Intensive Rinse” button

 
 
 
 
- The amount of water is increased to ensure a more intensive rinse.
- This option is particularly suitable for areas with very soft water, washing baby linen and people with detergents allergies.

“Rinse Hold” button



- The laundry remains in the last rinse water without progressing to the final spin cycle to avoid creasing and prevent colours from fading.
- This option is particularly recommended for the “Synthetic” , “Delicate”  and “Daily Mixed”  programmes.
- This function is particularly useful if you want to postpone spinning to a later time, or if you want to drain only.

Note: The programme selector knob stops on .

Appliance in “Rinse Hold” :


- Press the “Rinse Hold” button  again: the programme will terminate automatically with the selected spin cycle.
- If you do not wish to spin the clothes, press the “On/Off” button , turn the programme selector knob to the “Drain” programme  and press the “On/Off” button  again.

PROGRAMME START



Turn on the tap and press the “On/Off” button . The indicator light of the “On/Off” button  lights up.

Note: If there is a power interruption or if the appliance is disconnected during the cycle, the programme will run again from the point where it was interrupted.

END OF WASH CYCLE



- The programme selector knob is in the Stop position.
 - Press the “On/Off” button  to switch off the machine.
 - Cancel the option.
 - Turn the tap off.
 - Wait for the lid to unlock (about 1 minute).
 - Open the lid and the drum doors and unload the machine.

CHANGE THE PROGRAMME DURING THE WASH CYCLE




- Switch off machine by pressing the “On/Off” button .
- Select the new programme.
- Start programme by pressing the “On/Off” button  again.

PAUSE/INTERRUPT A PROGRAMME

If, for any reason, you wish to interrupt the programme for a certain time and continue it later:

- Press the “On/Off” button .
- After the desired pause, press again the “On/Off” button .

CANCEL PROGRAMME

- Switch off the machine by pressing the “On/Off” button .
- Set the programme selector to “Drain”.
- Press the “On/Off” button  again to start the “Drain” programme .